CONSTRUCTION MANUAL

Sharpin King PC / 4K

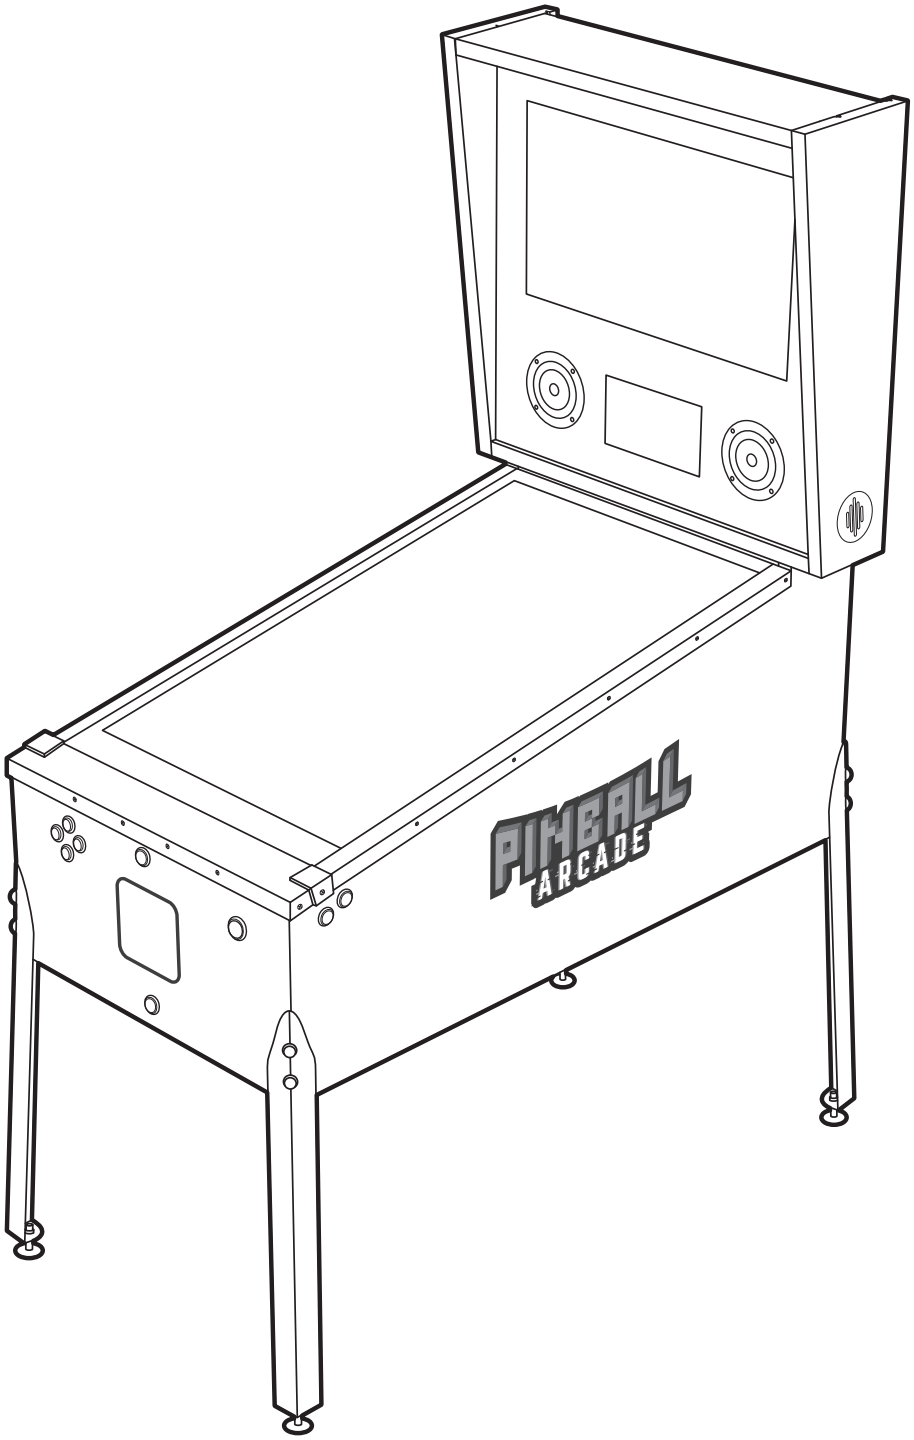

Video Anleitung:

Video Tutorial:

digital-pinball.com/king-setup

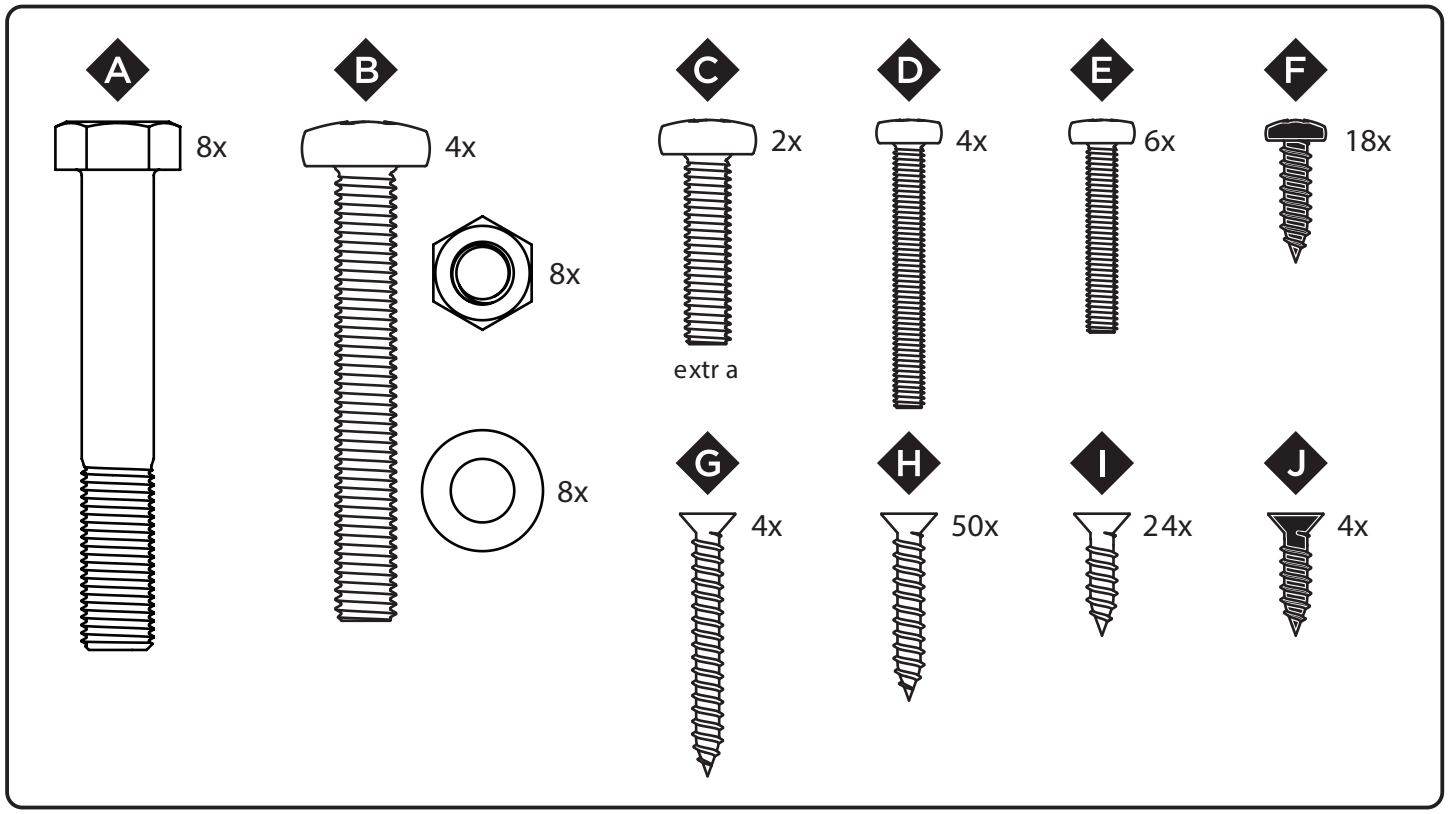

1

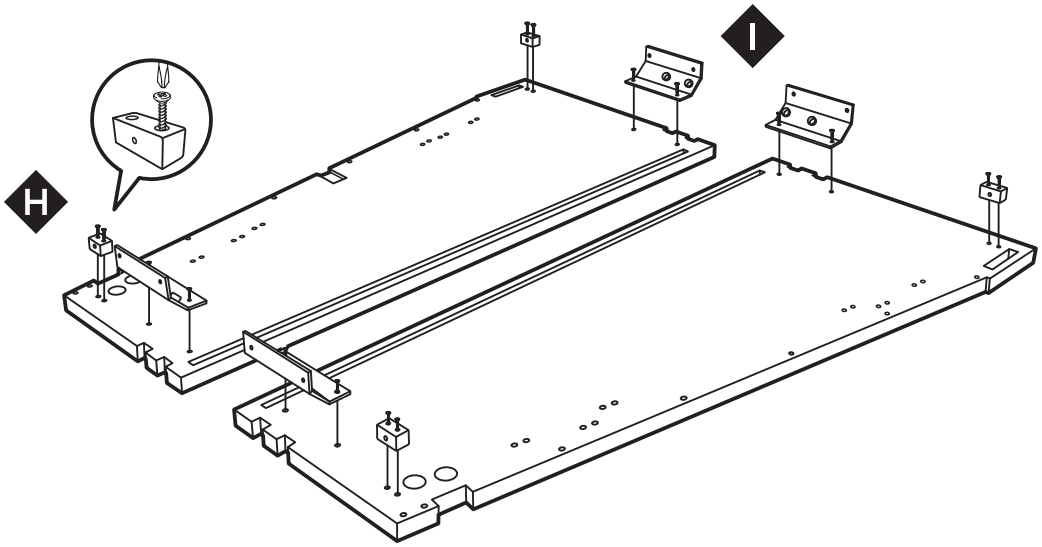

2

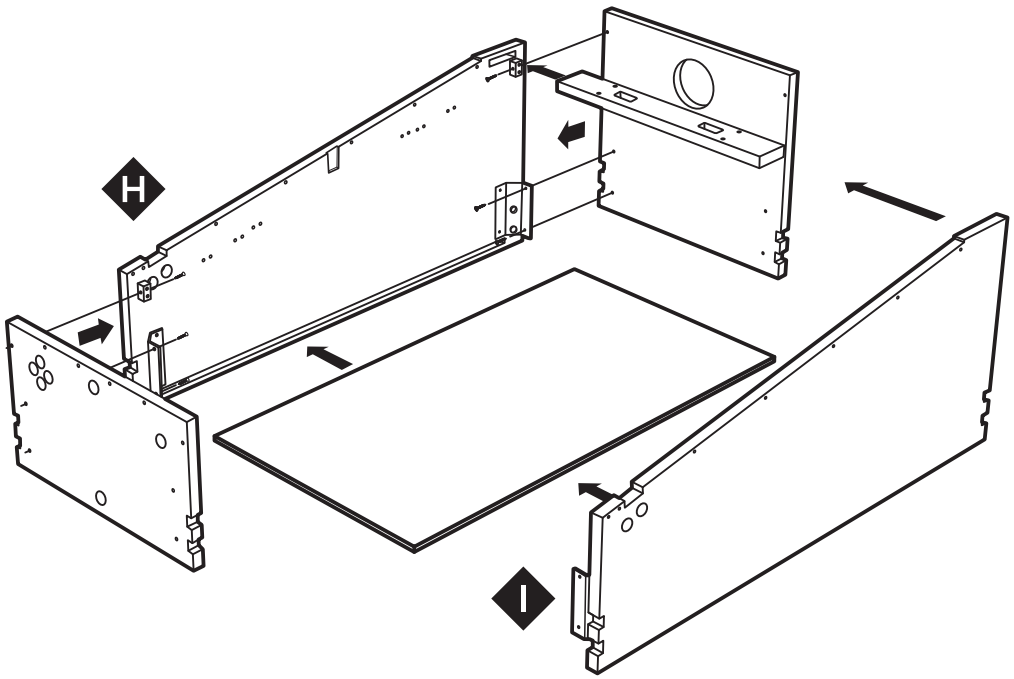

3

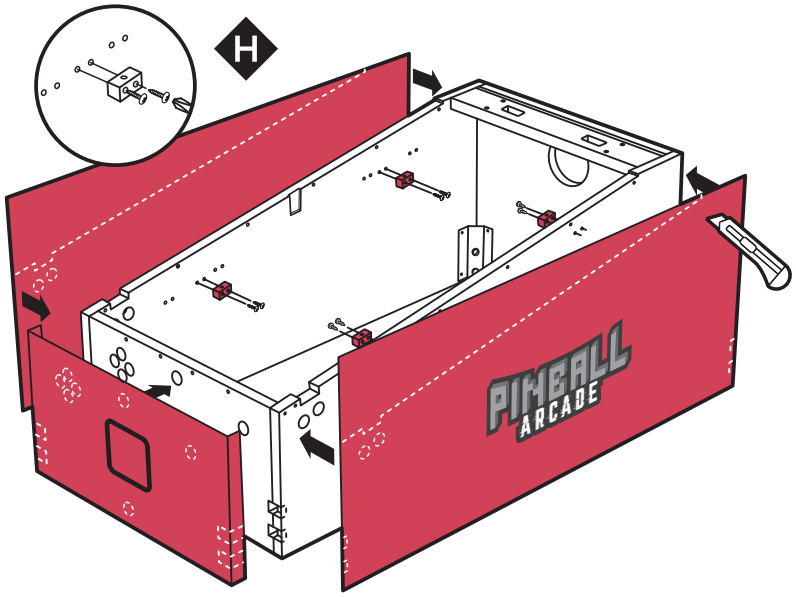

4

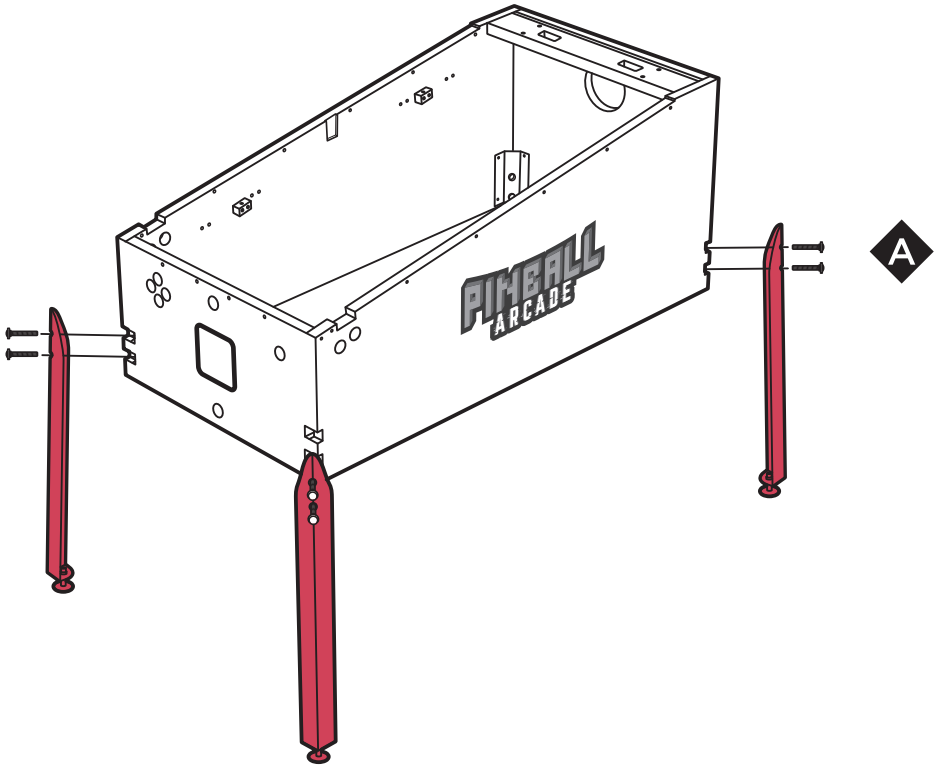

5

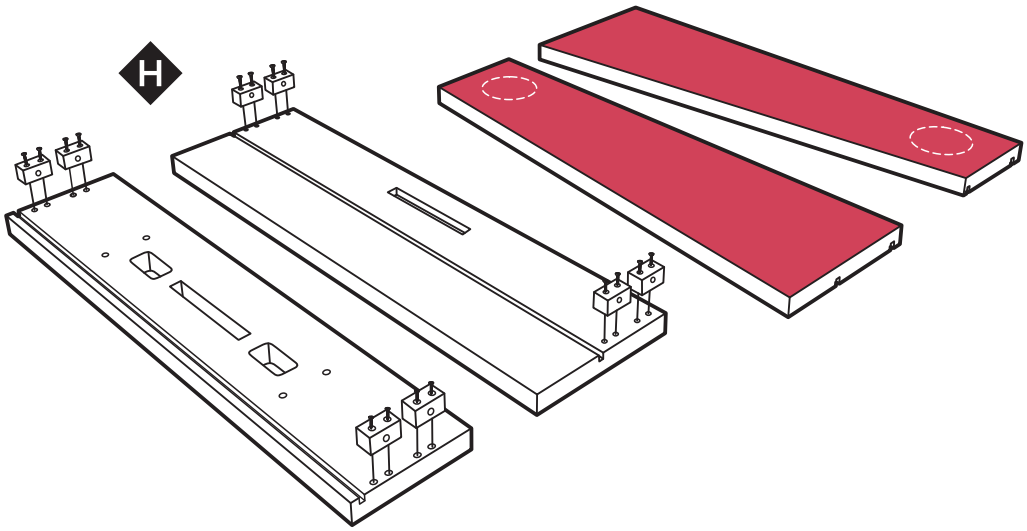

6

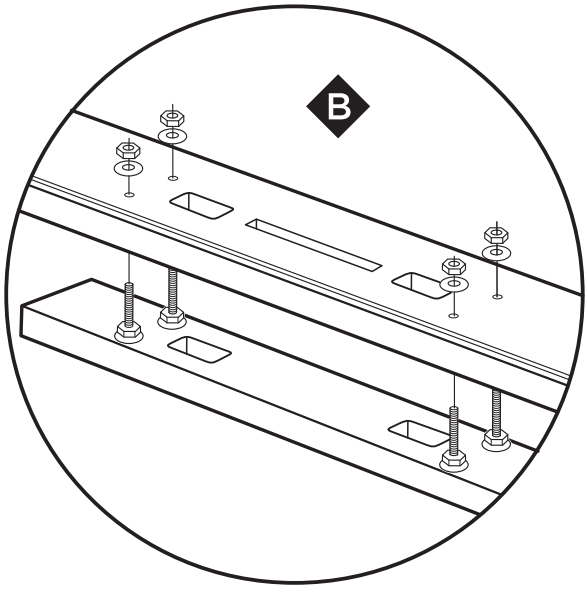

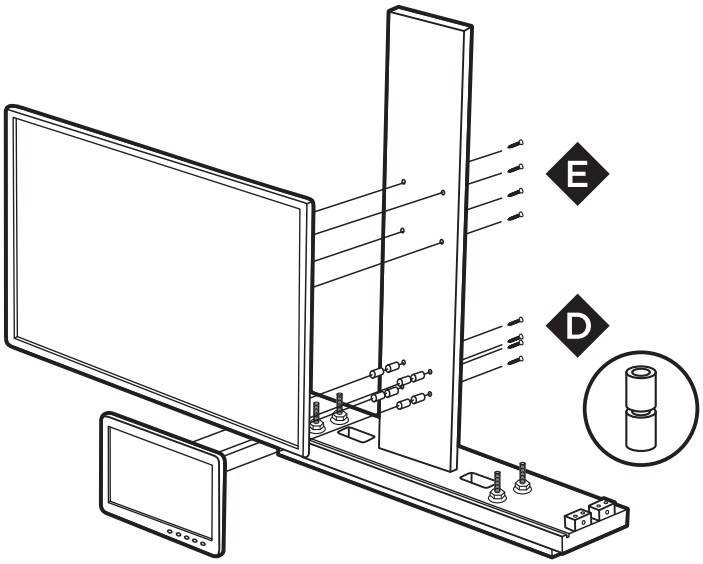

7

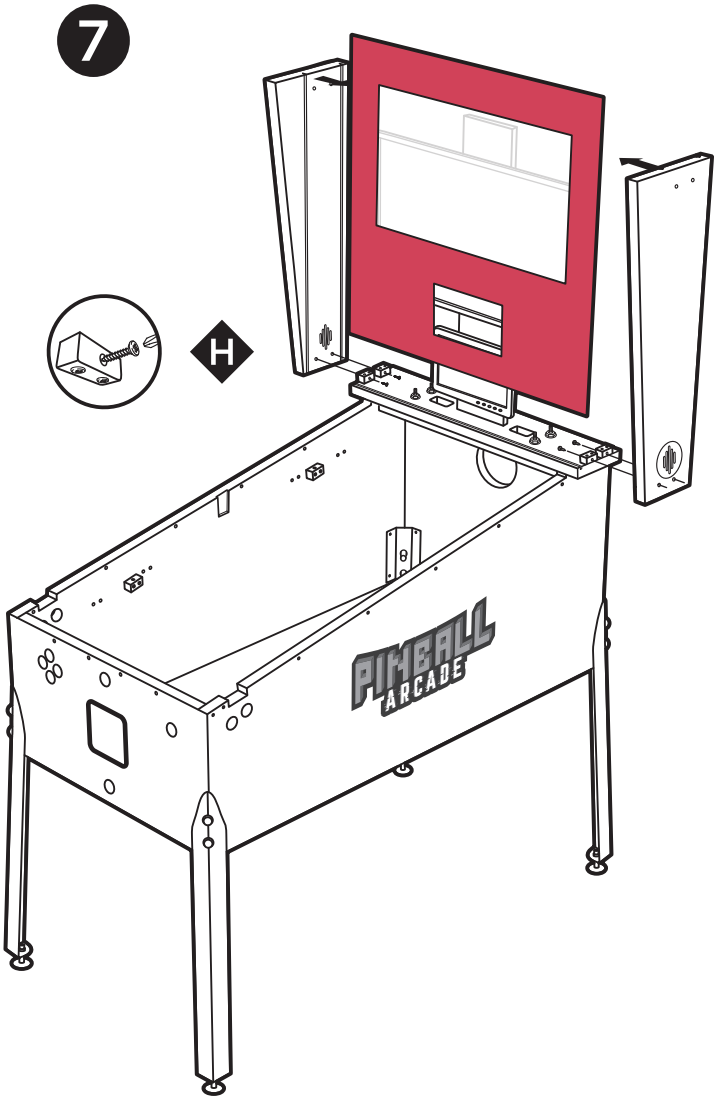

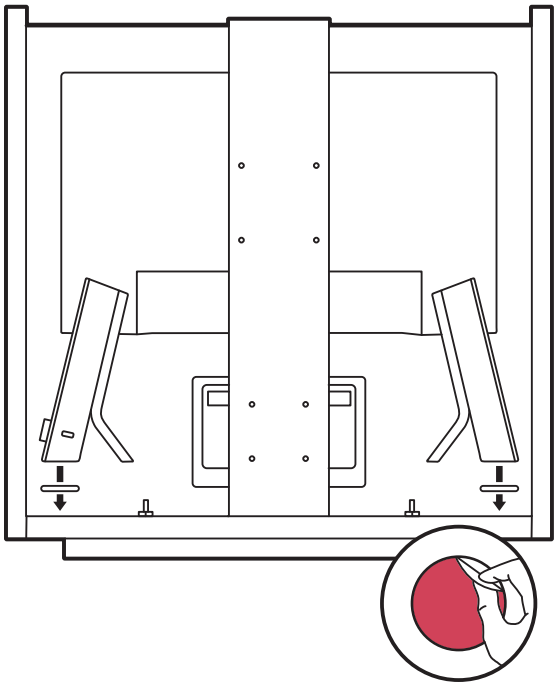

2x

8

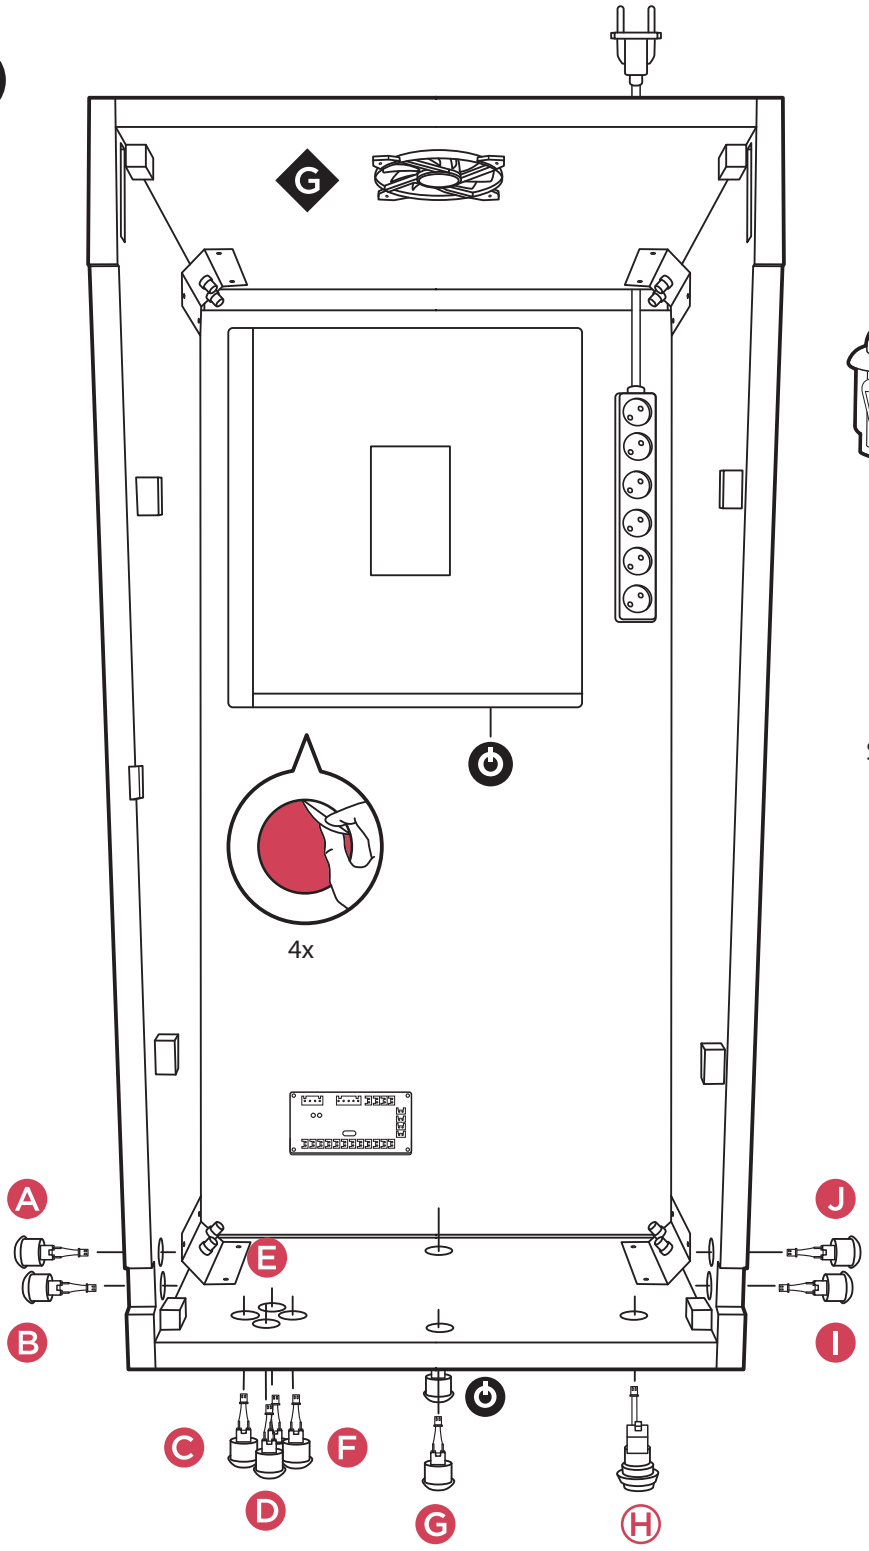

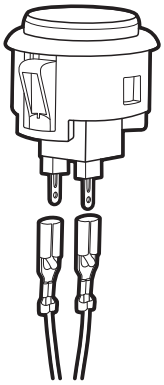

Standard Button

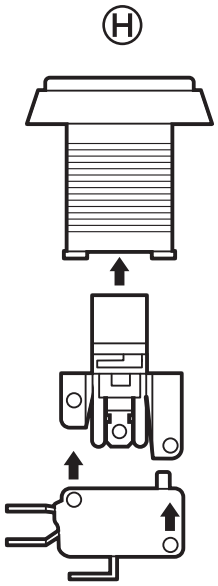

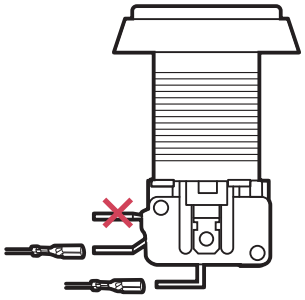

Launch Button

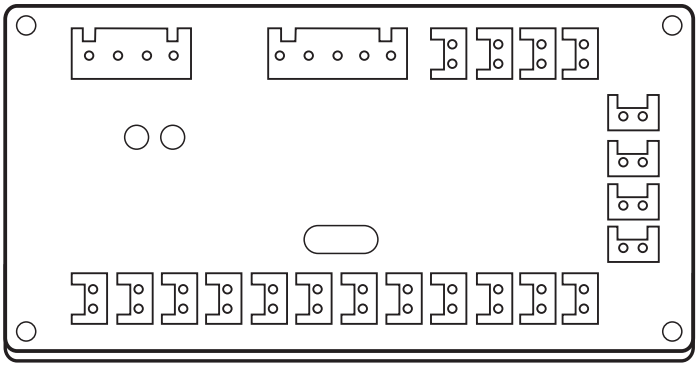

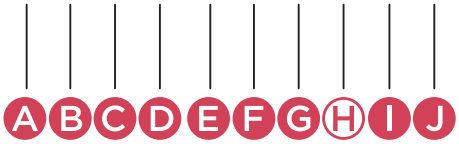

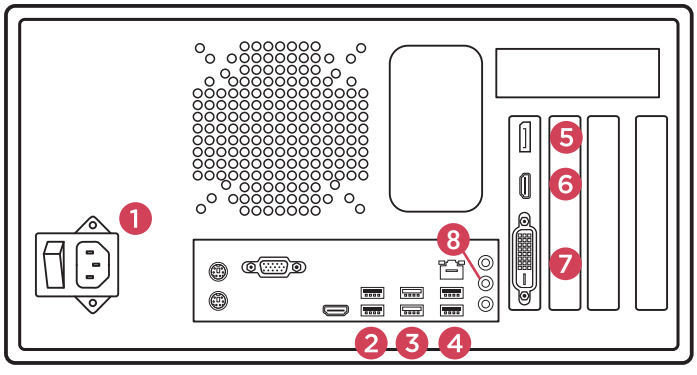

1. Power
2. Mouse/Keyboard Stick
3. Button Encoder
4. Wifi Stick
5. Playfield Screen
6. DMD Screen
7. Backglass Screen
8. Speakers

9

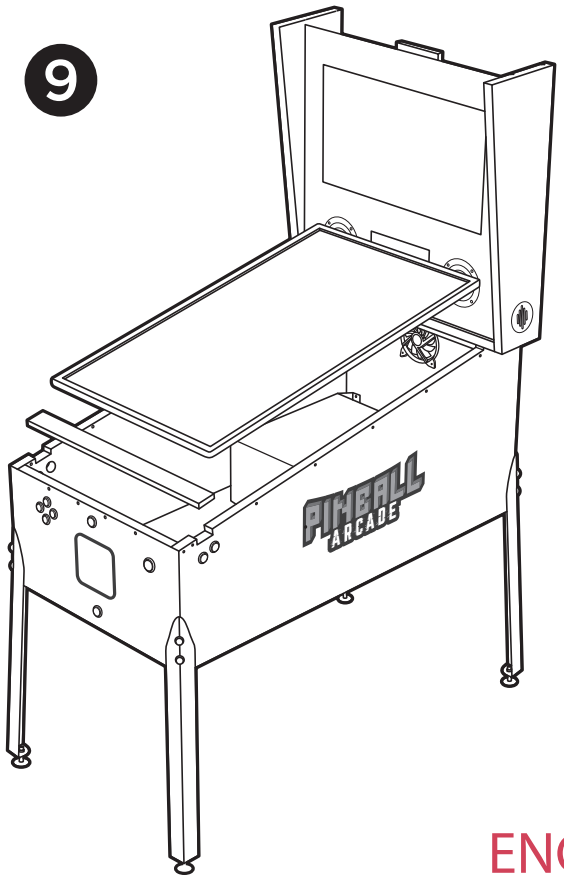

Turn on

1. TV
2. DMD
3. Backglass
4. PC

ENGLISH:

- Before you close the machine, make sure all displays are connected to the PC.

- Make sure you power on all displays BEFORE you power on the PC

- Turn on the PC and check if the Playfield, DMD and Backglass are displayed in correct position. If not please ckeck if all displays are TURNED ON and Restart the PC.

- If the Displays still show a wrong image, you find a tutorial to fix the wrong display positioning here: digital-pinball.com/king

- To avoid any latency please set the TV to gaming mode.
If you still have a lag please change the USB port of the button encoder.

DEUTSCH:

- Vergewissern Sie sich vor dem Schließen des Geräts, dass alle Displays an den PC angeschlossen sind.

- Stellen Sie sicher, dass Sie alle Displays einschalten, bevor Sie den PC einschalten

- Schalten Sie den PC ein und prüfen Sie, ob Playfield, DMD und Backglass in der richtigen Positionen angezeigt werden. Wenn nicht, überprüfen Sie bitte, ob alle Anzeigen eingeschaltet sind, und starten Sie den PC neu.

- Wenn die Anzeigen immer noch ein falsches Bild anzeigen, finden Sie hier eine Anleitung um das Problem zu lösen: digital-pinball.com/king

- Stellen Sie den TV bitte auf Gaming Modus. Wenn Sie trotzdem eine Verzögerung empfinden stecken Sie den Button encoder an einen anderen USB port

10

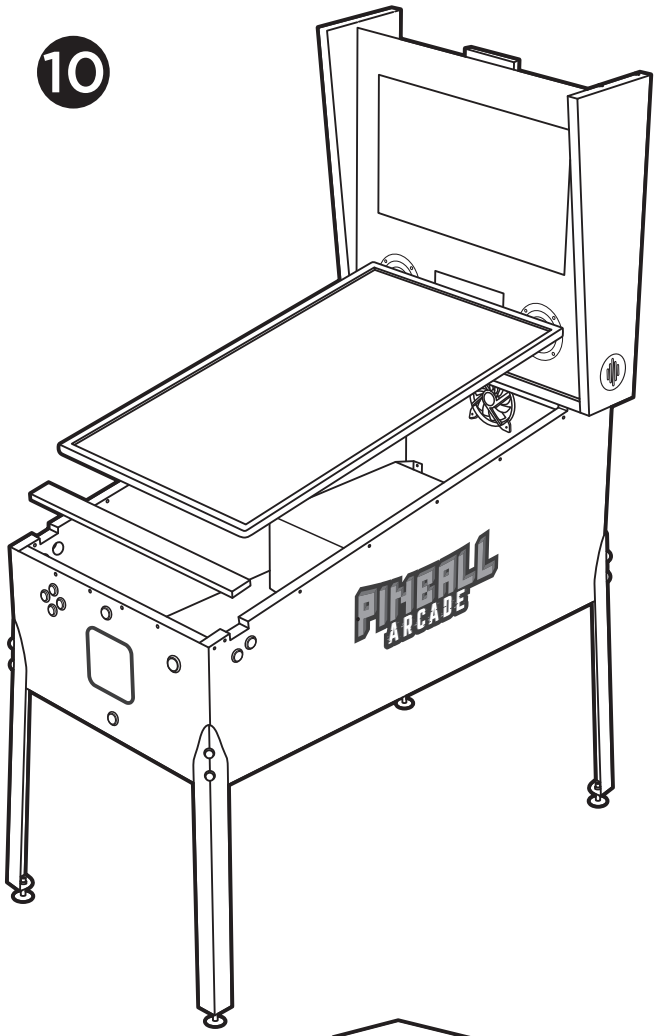
PINBALL
ARCADE

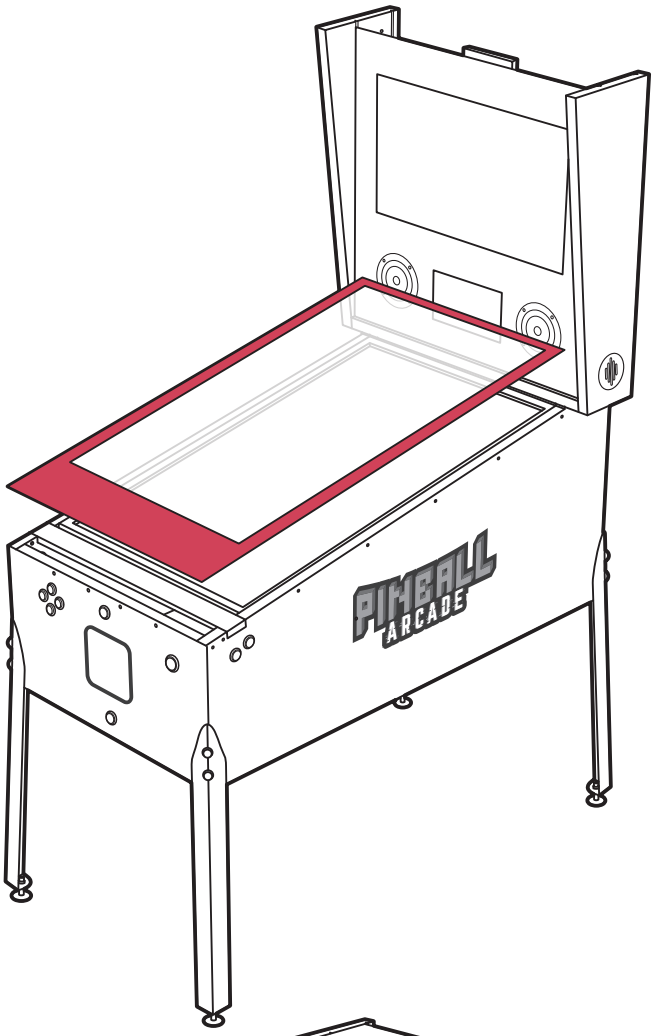
PINBALL
ARCADE

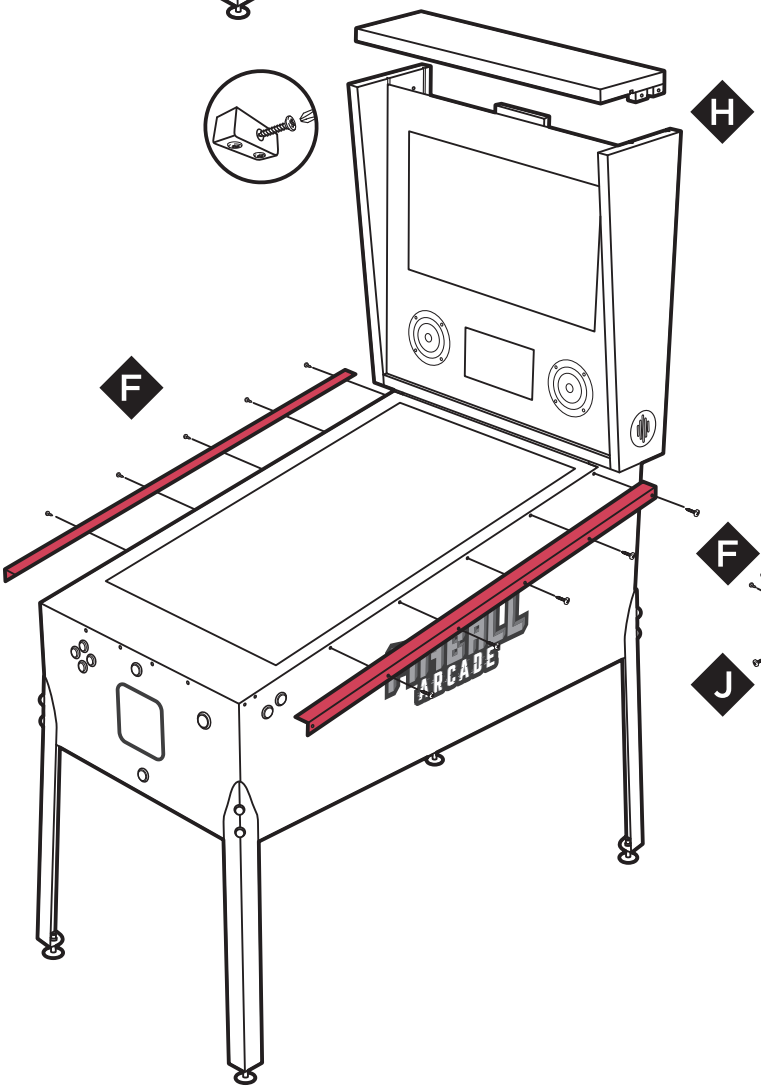
H
F
PINBALL
ARCADE

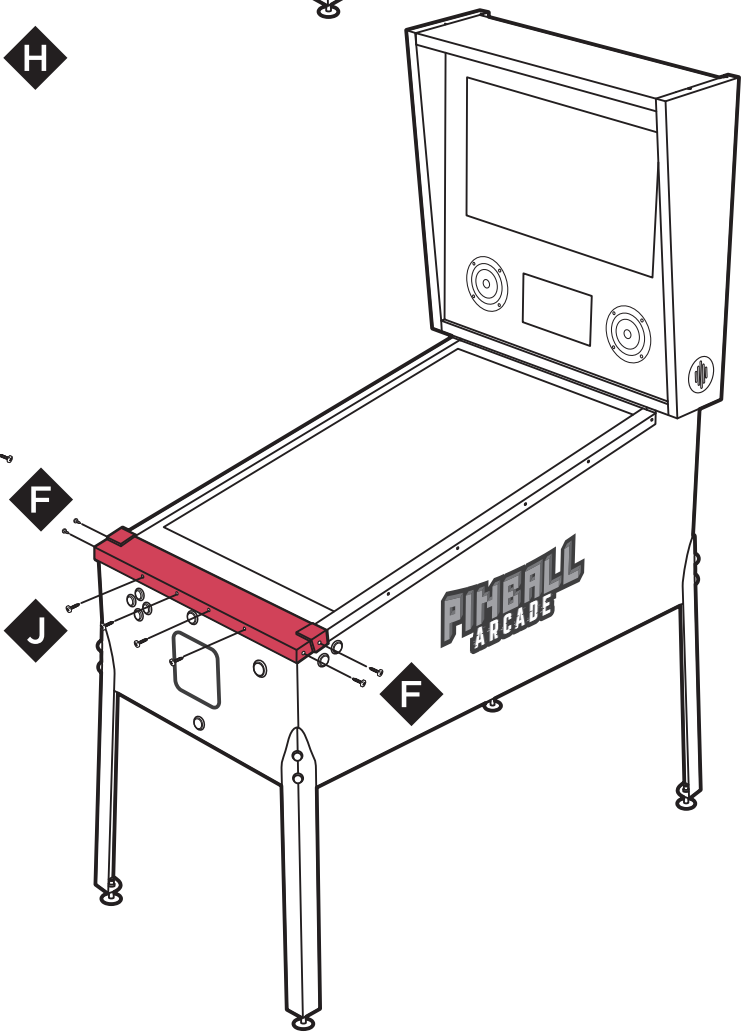
F
J
F
PINBALL
ARCADE

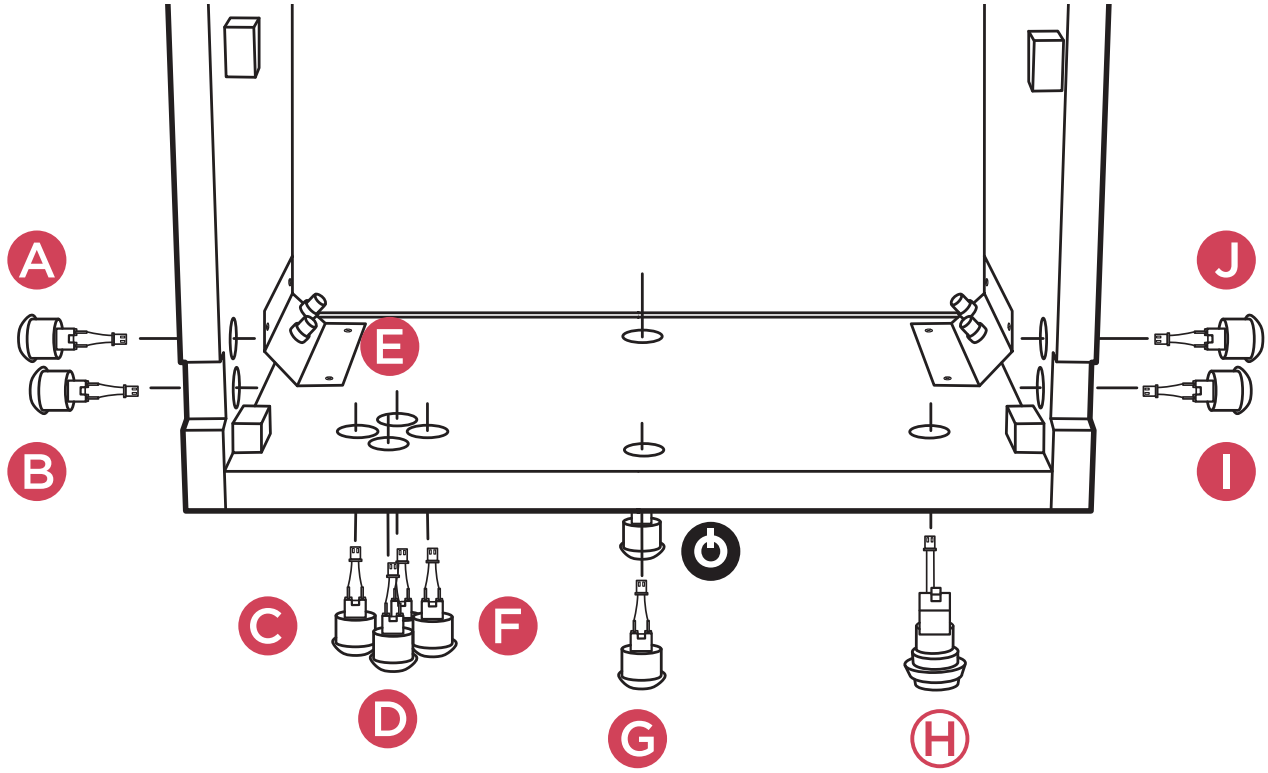

- Power
- A left flipper
- B left nudge
- C not set
- D Insert coin
- E Exit Game
- F not set
- G vertical nudge
- H start game / launch ball
- I right nudge
- J right flipper

Don’t sit or stand on the Pinball Machine

Don’t let children play alone

Don’t place heavy items on the Pinball machine

9 780201 398922